
ST 20 connecting cable - pin assignments-

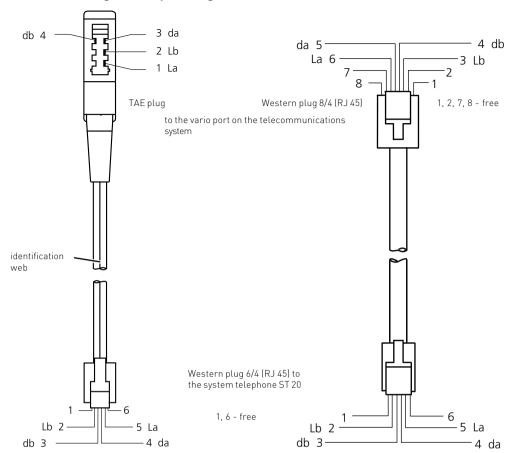



Ident. No. 1525219

Subject to change without notice. No liability can be accepted for errors contained in this document.

Printed in Germany 0047

AGFEO GmbH & Co. KG

Gaswerkstr. 8 D-33647 Bielefeld

Internet: http://www.agfeo.de

ST 20 system telephone A



Conditions for use -

The system telephone is only permitted for its intended purpose in the following telecommunications systems:

- ISDN telecommunications systems belonging to the AGFEO Business-Line AS 31 ST, AS 32, AS 33 AS 34
- ISDN telecommunications systems belonging to the AGFEO Profi-Line AS 40, AS 40 P, AS 4000, AS 100 IT
- Analog telecommunications systems belonging to the AGFEO system family AS 22, AS 23, S 24
- Deutsche Telekom AG ISDN telecommunications system Eumex 312
- Deutsche Telekom AG analog telecommunications systems family focus I

The system telephone ST 20 must not be connected to a subscriber connection of a telecommunications network.

AGFEO GmbH & Co KG cannot be held liable for damages resulting from use that is not in accordance with the intended purpose.

Safety notes -

- During a thunderstorm, you must not connect or disconnect the system telephone's connecting lead.
- Lay the system telephone's connecting lead in such a way that no-one can step on it or stumble over it.
- Make sure that no liquids penetrate into the interior of the system telephone. This may result in short-circuits.

Operation of the system telephone ST 20 —

Please refer to the operating instructions of your telecommunications system for details of how to operate the system telephone and for further information.

System telephone ST 20 function keys display



Dialling key pad - For dialling a number and entering data

microphone



and * keys



Set key - for initiating and ending programming



esc key - for clearing a connection or for cancelling programming mode



next key - for scrolling further in the display in the event of different functions



enter key - for confirming inputs



clear key - for clearing a display or data



shift key - to use the second level of function keys



Telephone directory key - to call up the telephone directory



Inquiry key - for inquiries and brokering

areen LED



Redial key - for dialling the number dialled last



Loudspeaker key - for activating the loudspeaker and switching to hands free mode. You can alter the function by programming.



10 function keys - default settings on delivery. You can modify the functions by programming



Red LED - Flashes in the event of an appointment call and an entry in the call list; lights up when do not disturb is on.



Green LED - Flashes when hands free mode is on.

Setting up and cleaning the system telephones, inserting the marking strips

Location --

Place the system telephones in a suitable location. Pay attention to the following points:

- Do not install them where they may be splashed by water or chemicals.
- Plastic feet of the telephones:
 Your unit was produced for normal conditions of
 use. The plastic feet of the telephone may be
 detrimentally influenced by chemicals that are

used to produce furniture or which are used in the production of care agents. In certain circumstances, the feet of the telephones altered by external influences may leave nasty traces. Understandably, we cannot assume any liability for such damage. Therefore, use a slip-proof support surface for your telephones, particularly on new furniture or on furniture that has been treated with care agents.

Cleaning —

You can clean your telephones easily. Pay attention to the following points:

- Wipe the telephone with a slightly moist cloth or use an anti-static cloth.
- Never use a dry cloth (charges may produce defects in the electronic circuitries).
- In any case, make sure that moisture does not penetrate into the interior (switches and contacts may be damaged).


Inserting the marking strips of the function keys -

Place your finger nail betwenn the window and the telephone housing at the top. Pull down the window so that it bends outwards.

Now you can remove it.

Insert the labelling strip. You can print the appropriate labels on your PC with the configuration program TK-Set.

To insert, place the window in the slit at the bottom. Press down to bend out and insert the other end.

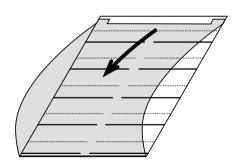

2