 


AC 14 Phonie, AC 14 WebPhonie, AC 16 WebPhonie, AC 141 WebPhonie plus

Quick Reference Guide

External call

Dial "0" to seize an outside line



Automatic outside line seizure



External call and seizing a specific MSN (instead of seizure with "0")

 


Internal call

Dial "0" to seize an outside line



Automatic outside line seizure



Internal phone number - 11 to 16 (20 to 29 USB connection, 30 to 39 for internal S0)

Internal forwarding



 
External forwarding




Answering a waiting call




Rejecting a waiting call



Call waiting prevention

 

Picking up an answering machine call

 

Picking up an external call



Picking up an internal call



Conference



Night service



Parking an external call in the telephone system / Unparking








Parking an external call in the ISDN exchange

 **R** * **4** **3** **4** **4**  Index 00, ..., 99 

Recovering (unparking) an external call

 * **4** **2** **8** **4**  Index 00, ..., 99 






 
Refer back / Brokerage

 **R**   **R**  with "0" back to external call with internal phone number to internal call  ...




 



 



Callback

   **R** * **7** **8** **3**  




 



 


Phonebook - dialling phone numbers

 * **8** **3** **5** (**8**  Vanity (enter name)  / **5**  enter short dialing index)  

Diversion via the telephone system - programming and activating (switching on) a diversion

 * **8** **6** **5** (**7**  permanent / **2**  when busy / **6**  not answering) **4**  Internal phone number →
→ (**3**  External phone number **#** / **4**  Internal phone number / **5**  Short dialing index / **8**  Vanity (enter name))  


Diversion via the ISDN exchange - programming and activating (switching on) a diversion

 * **8** **6** **5** (**7**  permanent / **2**  when busy / **6**  not answering) **6**  MSN **#** →
→ (**3**  External phone number **#** / **5**  Short dialing index / **8**  Vanity (enter name))  

Activating a diversion (switching on)

 * **2** **5** **8** (**4**  Internal phone number / **6**  MSN **#**)  

Deactivating a diversion (switching off)

 * **3** **3** **2** (**4**  Internal phone number / **6**  MSN **#**) 

Forwarding (internal)

 * **9** **3** **4** (**3**  on / **2**  off) **2**  all MSNs  

Notes: On telephones, particularly that do not have a * key or which do not support these functions, you must press the digits **99** instead of the * key. This feature has to be enabled in TK-Suite.