

**Door call variant 2 (night service / AS 190 plus, AS 191 plus)**

\* 5 3 4 = off  
 5 = on Internal phone number of the door

**Calling a door station/picking up a door call (AS 190 plus, AS 191 plus)**

\* 1 1

**Actuating the door opener (AS 190 plus, AS 191 plus)**

Door call R \* 1 1 Direct \* 1 2

**Activating diversion from (follow me) / Deactivating diversion from**

\* 5 7 1 \* 5 7 0

**Activating/deactivating timers**

\* 1 3 Timer group 0 = Timer off  
 1 = Timer on  
 2 = Funktion off  
 3 = Funktion and timer on

**Activating diversion to (diversion by the telephone system)**

\* 5 8 1=permanent 2=on busy 3=no answer 1=external 2=internal 3=abbreviated dialling diverted internal phone number External phone number or phonebook number #

**Deactivating diversion to (diversion by the telephone system)**

\* 5 8 0 diverted internal phone number

**Diversion to - call forwarding (diversion by the ISDN exchange)**

Permanent \* 6 3 Destination: 1 = external phone number 2 = phone-book number Diversion: Enter the system or multiple subscriber number # Destination: Enter the external phone number or phonebook number #

on busy \* 6 4 # #

if no answer \* 6 5 # #

deactivating \* 6 3 0 system or multiple subscriber number #

**Notes:** On telephones, particularly telephones that use the pulse dialling method that do not have a \* key or which do not support these functions, you must press the digits 99 instead of the \* key.

Ident. No. 534 692  
Modifications and errors reserved  
Printed in Germany 1991

AGFEO GmbH & Co. KG  
Gaswerkstr. 8  
D-33647 Bielefeld  
Internet: <http://www.agfeo.de>

**AS 140 plus, AS 141 plus,  
AS 190 plus, AS 191 plus**

**Short-form operating instructions for  
analog and ISDN terminals**

**External call**

Dial "0" to seize an outside line 0 Automatic outside line seizure #

**External call and seizing a specific MSN (instead of seizure with "0")**

\* 0 0 External phone number(MSN) #

**Reserving an outside line (B channel) (seizure with "0")**

0 R \* 2 9

**Internal call**

Dial "0" to seize an outside line # Automatic outside line seizure #

Internal phone number - 10 to 99 depending on the decade

**Internal forwarding without announcement**

R

**External forwarding**

R 0 R \* 2 0

**Answering a waiting call / Rejecting a waiting call**

# R \* 8 # R \* 2 1

**Internal call waiting announcement**

# # R \* 1 9

**Call waiting prevention on/off**

\* 5 5 1 = on 0 = off 1 = 1st internal phone number 2 = 2nd internal phone number 0 = both internal phone number

### Picking up an answering machine call

Internal number of the answering machine

### Picking up calls

External call Door call

### Do not disturb

1 = 1st internal phone number  
2 = 2nd internal phone number  
0 = both internal phone number 1 = internal calls  
2 = external calls  
3 = all calls  
4 = Do not disturb off

### Call variant 2 (night service)

1 = on  
0 = off  
2 = all off  
3 = all on Phone number of call variant 2

### Call variant 3 (internal call forwarding)

1 = on  
0 = off  
2 = all off  
3 = all on Phone number of call variant 3

### Automatic dialling - connection without dialling

1 = on  
0 = off

### Busy on busy

1 = on  
0 = off External phone number

### Three-party conference (internal/external)

### ISDN three-party conference

### Announcement to system telephones (AS 141 plus, AS 191 plus)

internal phone number of a system telephone  
00 = to all system telephones

### Placing a connection on hold (point-to-multipoint connection only)

### Least Cost Routing (LCR) on/off

1 = on  
0 = off

### Parking in the telephone system

Unparking

### Parking in the ISDN exchange (point-to-multipoint connection only)

Call identifier 0 to 9

### Unparking in the ISDN exchange

Call identifier 0 to 9

### Room monitoring

preparing Pick up

### Relay switching (AS 190 plus, AS 191 plus)

Internal phone number 1 = on  
0 = off

### Inquiry / brokering

Return to external subscriber with "0" to external subscriber with internal phone number to an internal call ...

### Call back on busy (ISDN)

### Initiating an internal callback

### Dialling a phonebook number

to

### Telephone lock

1 = lock  
0 = unlock Telephone code

### Door call diversion on (AS 190 plus, AS 191 plus)

1 = external phone number  
3 = phonebook number Internal phone number of the door External phone number or phonebook number

### Door call diversion off (AS 190 plus, AS 191 plus)

Internal phone number of the door